

QUICK START GUIDE (NT511 INSTALLATION NOTES)

RULES FOR THE CORRECT INSTALLATION OF THE NT511 CONTROL UNIT

In order to guarantee the correct and reliable operation of the transformer temperature monitoring system, follow the instructions supplied in this document about the installation of the control unit and the connection of the temperature sensors.

SAFETY REQUIREMENTS

ATTENTION:

Read the manual carefully before starting to use the control unit. Keep the instructions for future reference.

Do not open the device, touching any internal components can cause electric shock. Contact with voltage over 50 Volts can be fatal. To reduce the risk of electric shock, do not dismantle the back of the device for any reason. Moreover its opening would void the warranty.

Before connecting the device to the power supply, make sure that all the connections are correct. Always disconnect the unit from the supply before any cabling modification.

Any work on the equipment must be entrusted to a qualified engineer.

Failure to observe these precautions may result in damage, fire or electric shock, with possible serious injury!

POWER SUPPLY

The NT511 has 230Vac power supply.

Before using it, make sure the power cable is not damaged, knotted or pinched. Do not tamper with the power cable. Never disconnect the unit by pulling the cable, avoid touching the pins. Do not carry out any connecting/disconnecting with wet hands. To disconnect the device, do not use objects such as levers. Immediately disconnect the device if you smell burning or see any smoke: contact technical service.

LIQUIDS

Do not expose the equipment to splashes or drops, do not position it in places with humidity exceeding 90% and never touch with wet or humid hands during storms. If any liquid penetrates the control unit, disconnect it immediately and contact technical service.

CLEANING

Disconnect the power cable before cleaning the control unit, use a dry cloth to dust it, without any solvent or detergents, and compressed air.

OBJECTS

Never insert any objects into the cracks of the control unit. If this happens, disconnect the control unit and contact an engineer.

USE RESERVED TO QUALIFIED PERSONNEL

The purchased goods are a sophisticated electronic device that is totally unsuitable to be used by non-qualified personnel. Any work must be carried out by a specialist engineer.

ACCESSORIES

The use of non-original accessories or spare parts can damage the unit and endanger users' safety. In the event of faults, contact technical service.

LOCATION

Install the control unit indoors, in a place protected from water splashes and sun rays. Do not place near heat sources exceeding the parameters stated in this manual. Position on a stable surface, far from any possible vibrations. Position the unit as far as possible from any intense magnetic fields.



REPAIRS

For any fault, always use qualified personnel. Modifying of the unit boards entails the automatic forfeiture of the warranty.

FITTING THE CONTROL UNIT

The temperature control unit must be fitted complying with the following instructions:

- The device is designed to be panel-mounted.
- Do not position the device near any heat sources or strong magnetic fields.
- Operating temperature from -20°C to 60°C.
- Maximum humidity 90% (non-condensing).
- Indoor work environment (protected by splashes and sun rays).
- Make a 182 x 232 mm hole in the panel metal sheet.
- Fix the unit securely with the screws using the special holes.
- NT511 has a safety closure. To open the door, use a screwdriver #1X100mm.

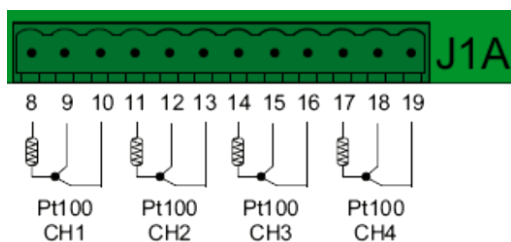
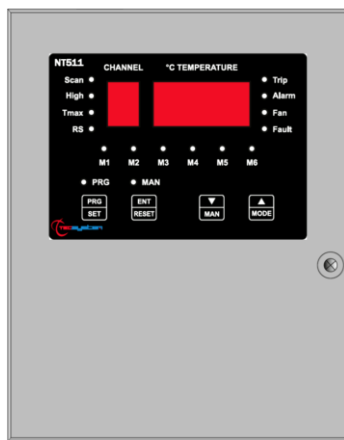


J1A SENSORS. 4 inputs for RTD sensors, Pt100 type with a 3 wires (max section 2,5mm²).

ELECTRICAL CONNECTIONS

The NT511 has 230Vac power supply. J4 terminals (36-38)

The ground must always be connected to terminal 37.

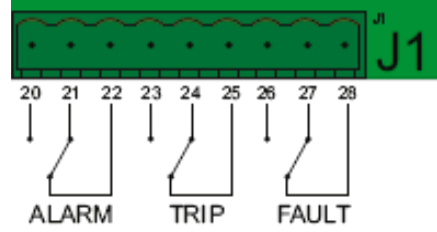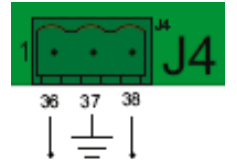


RELAYS


J1 Output relay with 5A-250Vac-res COSΦ=1 contacts.

MOTOR OUTPUTS (M1-M2-M3-M4-M5-M6)


J3 Motor Outputs (M1-M2-M3-M4-M5-M6). Fuse 2A 250V uscita (5x20 fast)

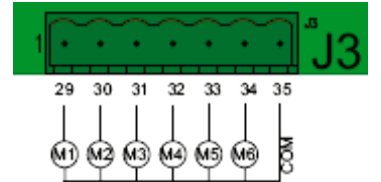

OPTIONS:

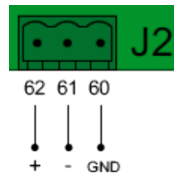

J2. Only for NT511 Modbus Inside and AD. The MODBUS INSIDE (Follow the standard IEA RS485) internal module allows connecting the NT511 control unit to an RS485 network with Modbus RTU. Connect the twisted pair 24AWG paying attention to polarities and lay the network avoiding to make sharp bends or ring windings in order not to modify line impedance. If necessary, the GND terminal for grounding is also available. Always position the RS485 twisted pair far from power cables. Modbus programming: see table PRG. DEFAULT

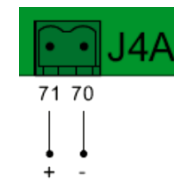

J4A. It is possible to connect a displaying or acquisition device to the 4.20 mA output. The permitted load impedance for the output is from 0 to 500 ohm.

CONNECTION FROM THE SCS BOX / SENSORS TO THE CONTROL UNIT

To connect the Pt100 sensors correctly between the SCS box and the temperature control unit, comply with the following instructions rigorously:

Installation rules:

- Every Pt100 must be connected with a three-wire cable having a minimum section of 0.35mm² and a maximum of 1 mm².
- The extension cable must be screened with a tinned copper braid with 80% cover.
- The wires must be twisted.
- The cable screening must be grounded only with a termination, preferably on the unit side.
- The sensors' signal transfer cable must not be near any electrical cables, either low or medium-high voltage.
- The Pt100 cable and the signal transfer cable must be laid in a straight line, without any winding.
- Any caps used to butt conductors must be crimped properly to avoid false contacts.

ALARM CH1-CH2-CH3		TRIP CH1-CH2-CH3		ALARM CH4	TRIP CH4
90°C		119°C		NO/120°C	NO/140°C
FAN1		FAN1		HFN	FCD
CH1-2-3		ON: 70°C	OFF: 60°C	NO	NO
ADDRESS (*)	BAUD(*)	PARITY (*)		4.20mA (*)	END
1	9600	NONE		HOT	----

(*) options NT511 Modbus Inside or AD



ATTENTION:

We recommend you check the unit's programming before starting the device.

The default parameters set by TECSYSTEM might not match your requirements.

TO DOWNLOAD THE COMPLETE "NT511 INSTRUCTION MANUAL", USE* THE QR CODE ON THE CONTROL UNIT OR CONNECT TO THE TECSYSTEM WEBSITE (www.tecsystem.it)



INSTRUCTION



MANUAL

TECHNICAL INFORMATION: Mail: ufficiotecnico@tecsystem.it — tel: 02/4581861

*download the QR CODE READER application to your smartphone / tablet and you will be ready to read all Q codes